



SENTRY 4 Wire Version	
<b>RED</b>	Connect to Positive for Activation <i>*Factory Default is Beep Tone*</i>
<b>BLACK</b>	Connect to Negative for Ground
<b>YELLOW</b>	Momentarily Apply YELLOW to BLACK Wire for Tone Change (3-5 Seconds) <i>*Factory Default is Beep Tone* Selectable Beep or Squawker Tone</i>
<b>WHITE</b>	<p><b>Silent Function Options</b></p> <ul style="list-style-type: none"> <li>A. Connect to Black wire for &gt;3 Seconds to disable Tone Disconnect Black wire to reactivate Tone</li> <li>B. Momentarily apply twice to Black wire to disable Tone Reapply Black wire for &lt;1 Second to reactivate Tone</li> </ul>

SENTRY-X 5 Wire Version		RED	GREY	YELLOW	WHITE	BLACK
MODE	FUNCTIONS					
A1	Beep Tone + Flashing L.E.D. Lights	+				-
A2	Squawker Tone + Flashing L.E.D. Lights		+			-
B1	Flashing L.E.D. Lights Only	+		+		-
B2	Flashing L.E.D. Lights Only		+	+		-
C1	Beep Tone Only	+			+	-
C2	Squawker Tone Only		+		+	-

